



# Toastum

## Electric Toasters

---

### INSTRUCTION BOOKLET.

---

This book covers the use and care of the following Sunbeam Toasters

TOASTUM 2 – 2 SLICE	TA6210
TOASTUM 4 – 4 SLICE	TA6410



---

PLEASE READ THIS BOOK THOROUGHLY AND RETAIN FOR FUTURE REFERENCE.

---

\*TA6210 is pictured here.

TA6210/TA6410

---

# Sunbeam's Safety Precautions.

## SAFETY PRECAUTIONS FOR YOUR TOASTER.

- Do not place any objects such as toast, bread or similar on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- Use your toaster well away from walls, curtains, or other combustible materials.
- Do not leave your toaster unattended when in use.
- Clean crumb tray regularly.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- **WARNING:** Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.

## SAFETY PRECAUTIONS FOR ALL ELECTRICAL APPLIANCES

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please ring our Toll Free number in Australia on 1800 025 059. In New Zealand - contact the Sunbeam Office in Auckland on 09 912 0747.

## Ensure the above safety precautions are understood.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید کہ احتیاطهای بالا حتماً درک بشوند

 
ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Features of your new Sunbeam Toaster.

---

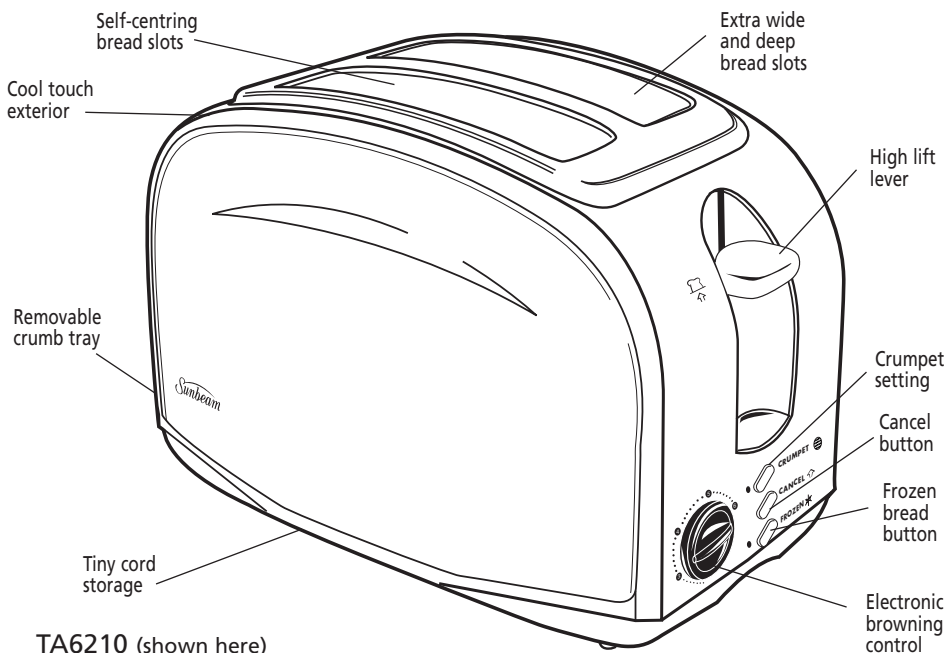

TA6210 (shown here)

## Extra wide and deep bread slots

Enables you to toast a large variety of breads - both thick and thin, bagels, crumpets and muffins.

## Self-centring bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

## Cool touch exterior

Remains cool to touch preventing burns and plastic wrappers clinging to the side of your toaster.

## Removable crumb tray

Pulls out from underneath your toaster for easy removal of crumbs.

## High lift lever

Raises the toast above the starting position so you can remove the toast from the toaster without burning your fingers. Ideal for crumpets and muffins.

## Electronic browning control

Variable toast settings from 1 - 6, toasts the bread to your desired colour consistently.

## Crumpet setting

This setting cooks crumpets to perfection. When activated additional heat is emitted from the centre elements to cook the top of your crumpet faster than the bottom. The top of the crumpet(s) must be faced towards the centre element. See illustration on page 5.

## Cancel button

Immediately interrupts any toasting cycle and pops the toast up.

## Frozen bread

Defrosts and toasts frozen bread.

## Cord storage

The cord can be wrapped underneath for safe and convenient storage.

# Using your Sunbeam Toaster.

---

Plug the toaster into a 230-240 volt AC power outlet and switch the power on.

## Toasting Bread

1. Position the bread into the bread slot.
2. Select the desired colour setting on the Electronic Browning Control.

**Important:** Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.

3. Push the Toasting Lever down to commence the toasting cycle.
4. When the colour setting is achieved, the toaster will automatically turn off and pop the toast up. If you need to remove the toast before the cycle is complete, then press the Cancel button. The Cancel button will immediately interrupt the toasting cycle and pop the toast up.
5. To remove small pieces of toast or bagels, use the High Lift Lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

# Toaster Functions.

## Crumpet function

The Crumpet setting is activated by first lowering the Lever down into position, then immediately push the Crumpet button, see Figure 1.

This function increases the heat emitted from the centre elements to cook the top of your crumpet perfectly without burning the bottom. Please note that you must face the top of your crumpets towards the centre element as illustrated in Figure 2.

## Cancel button

The Cancel button immediately stops any of the toasting cycles. As a consequence of this, the toast will pop up.

## Toasting frozen bread

To toast frozen bread, place your bread into the slot and push the Lever down to start the toasting cycle. As soon as the bread has been lowered and the toasting cycle has begun, press the Frozen button. This function extends the toasting time to allow for the defrosting of the bread before toasting.

**NOTE:** When using the Crumpet and Defrost function it is still very important to set the Electronic Browning Control to your desired setting.

## High lift lever

When toasting small pieces of bread or crumpets or muffins we recommend using the High Lift Lever to prevent you from burning your fingers.

## Toasting one or two pieces in your Toastum 4 – 4 slice toaster

Position the bread in the middle of the bread slot. When toasting two pieces, position one piece in the centre of each bread slot.

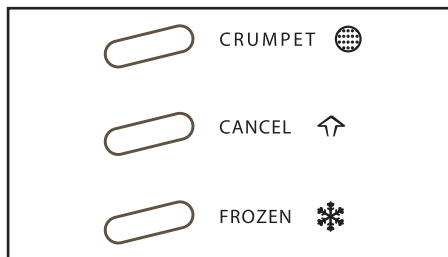 


FIGURE 1 – Toaster functions

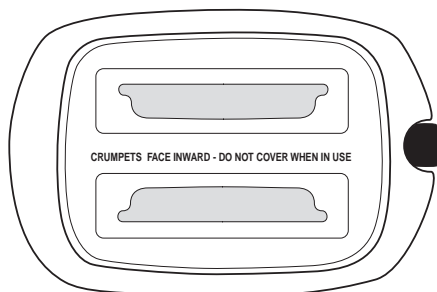 


FIGURE 2 – Crumpet Function

## Toasting muffins or bagels.

Ensure muffins or bagels are cut into even halves and fit freely into the bread slot. Do not force them into the toaster.

If your bread jams in the toaster, switch power off, remove the plug from the power outlet and ease the bread out of the toaster.

**WARNING:** Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other metal object, as contact with the live element may cause electrocution.

# Care and Cleaning.

---

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

## **To clean the exterior.**

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

**Do not use metal scourers or abrasives as this may scratch the exterior surface.**

## **Removable Crumb Tray.**

To remove the crumbs, simply slide out the tray, empty and place it back in the toaster.

**Clean the crumb tray regularly. Do not allow crumbs to accumulate, as they will accumulate and may cause a potential fire hazard.**

## **To clean the toaster interior.**

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs out.

*Sunbeam is a registered trademark. Toastum is a trademark of the Sunbeam Corporation. Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Approved by the appropriate Electrical Regulatory Authorities. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.*

© Copyright. SUNBEAM CORPORATION LIMITED 2002. (INCORPORATED IN N.S.W.) A.C.N. 000 006 771

*For more information or advice on this or any other Sunbeam appliance, visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.*

Australia 1800 025 059  
New Zealand (09) 912 0747.